


Sets for Canon EOS C500 MkII

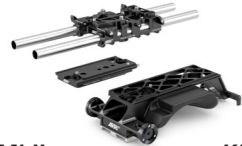

Basic Set for Canon C500 MkII **KK.0033625**
 Consists of:
 Plate for Canon C500 MkII K2.0033439
 Bridge Plate Adapter BPA-5 K2.0017138
 Support Rods 340mm, Ø15mm K2.66252.0



Pro Set for Canon C500 MkII **KK.0033626**
 Consists of:
 K2.0033441 1x Top Plate for Canon C500 MkII K2.0033441
 K2.0033439 1x Plate for Canon C500 MkII K2.0033439
 K2.0017138 1x Bridge Plate Adapter BPA-5 K2.0017138
 K2.0017270 1x Camera Center Handle CCH-4 K2.0017270
 K2.0019282 1x Sliding Adapter for CCH-4 K2.0019282
 K2.0006186 1x Rod Mounting Bracket RMB-3 K2.0006186
 K2.66255.0 1x 15mm Reduction Insert K2.66255.0
 K2.0006140 1x Mini Viewfinder Bracket MVB-1 K2.0006140
 K2.0015520 1x Bracket for Canon LM-V1 K2.0015520
 K2.66252.0 1x Support Rods 340mm, Ø15mm K2.66252.0



Plate for Canon C500 MkII
K2.0033439



Top Plate for Canon C500 MkII
K2.0033441

Sets for Canon C300 /C300 Mk II / C500



Basic Cine Set for Canon C300 Mk II **KK.0007700**
 Consists of:
 Cine Plate C300 MkII K2.0006864
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0
 Shoulder Pad CSP-1 K2.0006807

Pro Cine Set for Canon C300 Mk II **KK.0007705**
 Consists of:
 Cine Plate C300 MkII K2.0006864
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0
 Top Plate C300 MkII K2.0006859
 Center Camera Handle, CCH-2 K2.73002.0
 3/8" Accessory Shoe Adapter, 18.65mm square K2.54077.0
 Shoulder Pad CSP-1 K2.0006807

Pro Cine Set for Canon C300 Mk II + BP-8 **KK.0007703**
 Consists of:
 Cine Plate C300 MkII K2.0006864
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0
 Top Plate C300 MkII K2.0006859
 Center Camera Handle, CCH-2 K2.73002.0
 Bridge Plate BP-8 Set (19 mm Rods) K2.47090.0
 3/8" Accessory Shoe Adapter, 18.65mm square K2.54077.0
 Shoulder Pad CSP-1 K2.0006807

Pro Cine Set for Canon C300 Mk II + BP-9 **KK.0007704**
 Consists of:
 Cine Plate C300 MkII K2.0006864
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0
 Top Plate C300 MkII K2.0006859
 Center Camera Handle, CCH-2 K2.73002.0
 Bridge Plate BP-9 Set (15 mm Rods) K2.47091.0
 3/8" Accessory Shoe Adapter, 18.65mm square K2.54077.0
 Shoulder Pad CSP-1 K2.0006807

Pro Broadcast Set for Canon C300 Mk II **KK.0007702**
 Consists of:
 Broadcast Plate C300 MkII K2.0006797
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0
 Top Plate C300 MkII K2.0006859
 Center Camera Handle, CCH-2 K2.73002.0
 3/8" Accessory Shoe Adapter, 18.65mm square K2.54077.0

Basic Broadcast Set for Canon C300 Mk II **KK.0007699**
 Consists of:
 Broadcast Plate C300 MkII K2.0006797
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0

Pro Broadcast Set for Canon C300 Mk II + QRP-1 **KK.0007701**
 Consists of:
 Broadcast Plate C300 MkII K2.0006797
 Support Rods 340 mm (13.4"), Ø 15 mm K2.66252.0
 Top Plate C300 MkII K2.0006859
 Center Camera Handle, CCH-2 K2.73002.0
 Quick Release Plate, QRP-1 K2.0000399
 3/8" Accessory Shoe Adapter, 18.65mm square K2.54077.0

Sets for Canon C200

Basic Cine Set for Canon C200 **KK.0016044**
 Consists of:
 Adapter Plate for Canon C200 K2.0015518
 Cine Plate C300 Mk II K2.0006864
 Support Rods 340 mm (13.4 inch), Ø 15 mm K2.66252.0
 Shoulder Pad CSP-1 K2.0006807

Pro Cine Set for Canon C200 **KK.0016051**
 Consists of:
 Adapter Plate for Canon C200 K2.0015518
 Cine Plate C300 Mk II K2.0006864
 Support Rods 340 mm (13.4 inch), Ø 15 mm K2.66252.0
 Top Plate for Canon C200 K2.0015513
 Center Camera Handle, CCH-2 K2.73002.0
 Shoulder Pad CSP-1 K2.0006807
 Monitor Bracket for Canon C200 K2.0015520
 Viewfinder Mounting Bracket MVB-1 K2.0006140

Pro Broadcast Set for Canon C200 + QRP-1 **KK.0016052**
 Consists of:
 Adapter Plate for Canon C200 K2.0015518
 Broadcast Plate C300 Mk II K2.0006797
 Support Rods 340 mm (13.4 inch), Ø 15 mm K2.66252.0
 Top Plate for Canon C200 K2.0015513
 Center Camera Handle, CCH-2 K2.73002.0
 Quick Release Plate, QRP-1 K2.0000399
 Monitor Bracket for Canon C200 K2.0015520
 Viewfinder Mounting Bracket MVB-1 K2.0006140



Adapter Plate for Canon C200
K2.0015518



Top Plate for Canon C200
K2.0015513



Monitor Bracket for Canon C200
K2.0015520

Sets for Canon C700

Pro Set for Canon C700 **KK.0013598**
 Consists of:
 Plate for Canon C700 K2.0013191
 Support Rods 240 mm (9.4 inch), Ø 15 mm K2.66253.0
 Top Plate for Canon C700 K2.0013229
 Viewfinder mounting bracket Mini (MVB-1) K2.0006140
 Viewfinder bracket for Canon C700 K2.0013195
 Center Camera Handle, CCH-2 K2.73002.0

Cine 19mm Pro Set for Canon C700 **KK.0013597**
 Consists of:
 Plate for Canon C700 K2.0013191
 Support Rods 240 mm (9.4 inch), Ø 15 mm K2.66253.0
 Top Plate for Canon C700 K2.0013229
 Viewfinder mounting bracket Mini (MVB-1) K2.0006140
 Viewfinder bracket for Canon C700 K2.0013195
 Center Camera Handle, CCH-2 K2.73002.0
 Bridge Plate BP-8 Set (19 mm Rods) K2.47090.0

Cine 15mm Pro Set for Canon C700 **KK.0013599**
 Consists of:
 Plate for Canon C700 K2.0013191
 Support Rods 240 mm (9.4 inch), Ø 15 mm K2.66253.0
 Top Plate for Canon C700 K2.0013229
 Viewfinder mounting bracket Mini (MVB-1) K2.0006140
 Viewfinder bracket for Canon C700 K2.0013195
 Center Camera Handle, CCH-2 K2.73002.0
 Bridge Plate BP-9 Set (15 mm Rods) K2.47091.0

Broadcast Pro Set for Canon C700 **KK.0013596**
 Consists of:
 Plate for Canon C700 K2.0013191
 Support Rods 240 mm (9.4 inch), Ø 15 mm K2.66253.0
 Top Plate for Canon C700 K2.0013229
 Viewfinder mounting bracket Mini (MVB-1) K2.0006140
 Viewfinder bracket for Canon C700 K2.0013195
 Center Camera Handle, CCH-2 K2.73002.0
 Quick Release Plate, QRP-1 K2.0000399



Plate for Canon C700
K2.0013191



Top Plate for Canon C700
K2.0013229



Viewfinder Bracket for Canon C700, K2.0013195



Handgrip Adapter HGA-1 Set LBS-2 **KK.0005673**
 Consists of (without rods):
 Handgrip Adapter, HGA-1 K2.66191.0
 Lightweight Bridge Support, LBS-2 K2.66275.0

Viewfinder Brackets



Viewfinder Bracket for Canon C700, K2.0013195



EVF bracket for Canon Monitor Unit, K2.0008955